

Installing arm protector for Boxer

IT IS RECOMMENDED TO USE VELCRO OR HOOK AND LOOP TAPE (BETWEEN THE ARM AND THE PROTECTOR) IN ORDER TO KEEP THE ARM PROTECTOR IN PLACE.

1. Unhook the Velcro/ hook and loop tape.




2. Open the punchball



3. Take out the small leather part and put it between punchball arm and Boxer cabinet.



4. Bend forward fasteners and put the arm protector against the Boxer arm.

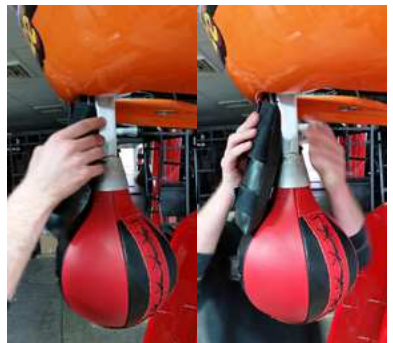

- Bend the upper Velcro/ hook and loop fasteners backwards and hook it.



- Bend backwards the lower Velcro/ hook and loop fasteners and hook it.



- Check the front of the Boxer if the arm protector is placed properly.

PROPER:



IMPROPER:

